




A Family Owned and Operated Company

Instructions For Handle Assembly

Insert Male Crimped end of each handle section into female open end of corresponding handle section. Once assembled, tap down lightly the male threaded end of handle onto a soft floor (carpeted preferred) to force fit section together permanently.

**If you have any issues, please contact Lola Products at 800-524-2822.
We will take care of all of your issues in relation to this product.**

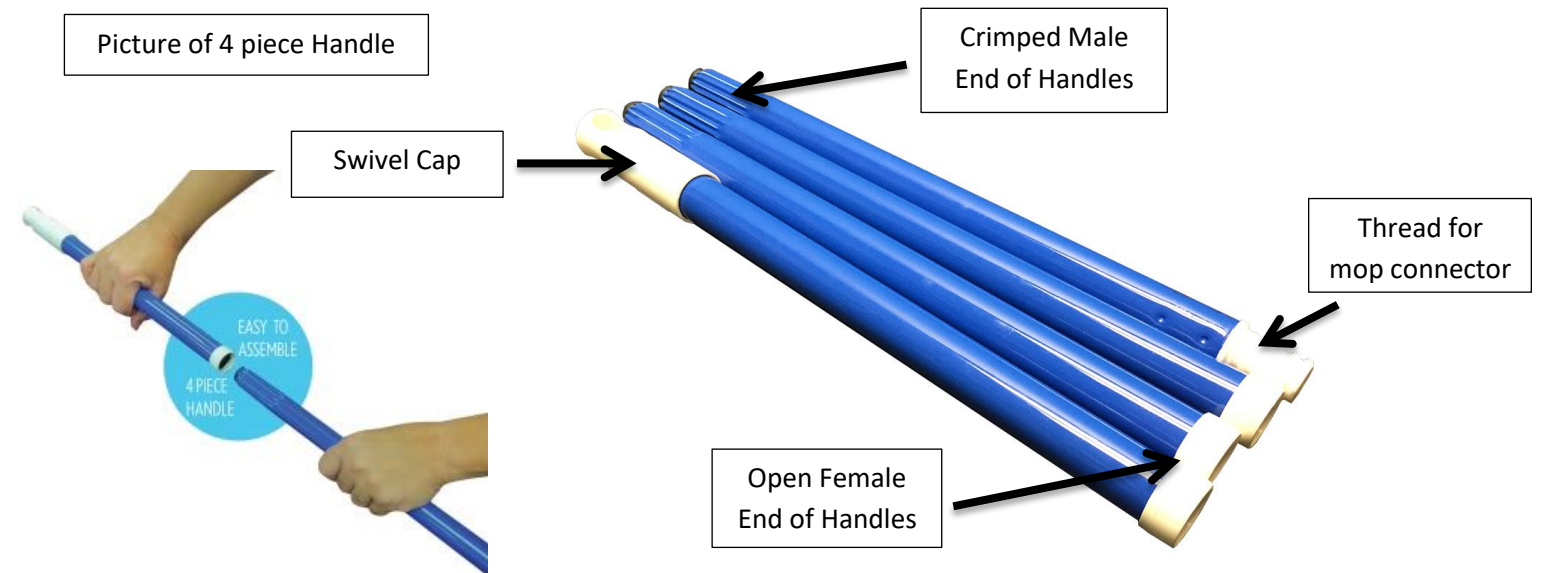

Picture of 4 piece Handle Fully Assembled



Crimped Part of Handle should be almost fully recessed inside of handle

